

# PHASE-A-MATIC, INC.

39360 3<sup>rd</sup> St. E. Suite 301 Palmdale, CA. 93550-3255


Phone: 661-947-8485  
info@phase-a-matic.com

FAX: 661-947-8764  
www.phase-a-matic.com

## ROTARY CONVERTER DIMENSIONS

DRAWING NO: **TD211 - A**

DATE: 08-01-2022

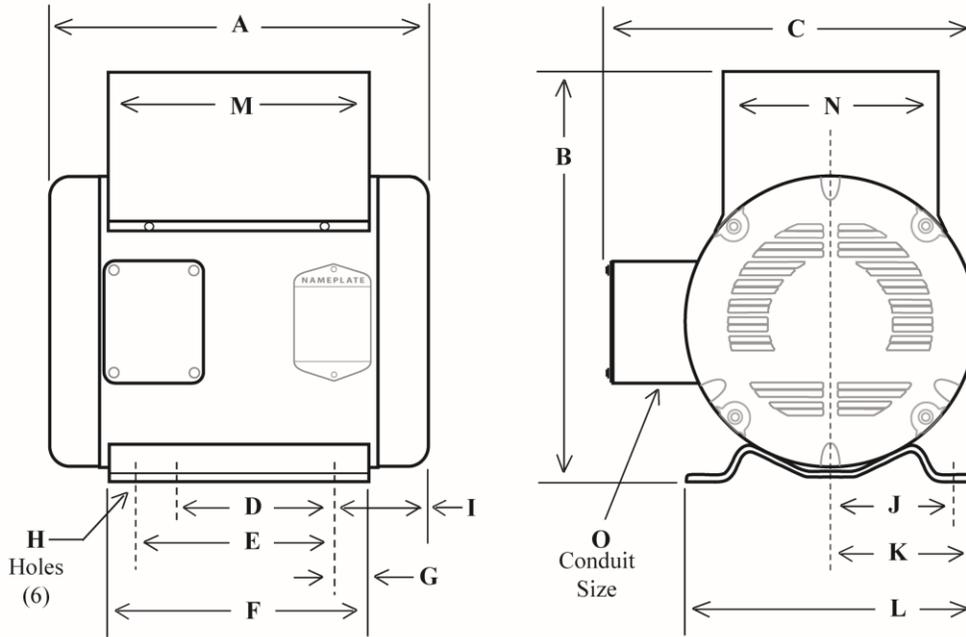

### Dimensions in Inches

230V	460V	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	SHIP. DIM.
----	----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----
----	----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----
----	----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----
<b>RWP-5</b>	----	11 1/2	11	9 5/8	4 1/2	5 1/2	6 1/2	1/2	13/32	3	3 3/4	4 5/16	8 5/8	7 1/2	5 1/2	3/4	19 x 12 x 13
<b>RWP-7</b>	----	13 9/16	13	12 1/4	5 1/2	7	8	1/2	13/32	3 9/32	4 1/4	4 3/4	9 1/2	9 1/2	6	3/4	16 x 16 x 16
<b>RWP-10</b>	----	13 9/16	13	12 1/4	5 1/2	7	8	1/2	13/32	3 9/32	4 1/4	4 3/4	9 1/2	9 1/2	6	3/4	16 x 16 x 16
<b>RWP-15</b>	----	17 1/8	17 1/2	14 3/4	8 1/4	10	11 1/4	5/8	17/32	3 9/16	5	5 5/8	11 1/4	11	6 3/4	1	31 x 24 x 21
<b>RWP-20</b>	<b>RH20-11KW</b>	17 1/8	17 1/2	14 3/4	8 1/4	10	11 1/4	5/8	17/32	3 9/16	5	5 5/8	11 1/4	11	6 3/4	1	31 x 24 x 21
----	----	-----	---	---	---	--	-----	---	-----	-----	---	---	---	---	---	---	-----
<b>RWP-30</b>	<b>RH30-19KW</b>	20 3/8	18 1/4	19	9 1/2	11	12 1/4	5/8	17/32	4 11/16	5 1/2	6 1/8	12 1/4	12 1/2	8 7/8	1 1/2	31 x 24 x 21
<b>RWP-40</b>	<b>RH40-22KW</b>	22 3/4	20 1/8	21	9	12	13 1/2	3/4	21/32	4 3/4	6 1/4	7	14	13	10 7/8	2	32 x 24 x 24
<b>RWP-50</b>	<b>RH50-30KW</b>	22 3/4	20 1/8	21	9	12	13 1/2	3/4	21/32	4 3/4	6 1/4	7	14	13	10 7/8	2	32 x 24 x 24
----	<b>RH75-37KW</b>	23 1/8	21 3/4	23 1/8	11 1/4	12 1/4	14	7/8	5/8	4 15/16	7	7 7/8	15 3/4	13 1/4	10 7/8	2 1/2	41 x 30 x 33
----	<b>RH100-55KW</b>	25 7/16	23 3/4	25 7/16	12 1/4	13 3/4	16 5/8	2 1/16	13/16	6 7/16	8	9 1/4	18 1/2	16	10 7/8	3 1/2	41 x 30 x 33